



TENTS | AUDIO VISUAL | DANCE FLOOR | STAGING | LINENS | DISHWARE

COFFEE MAKER 110 CUP (3 GAL)

Operating Instructions

Helpful Hints

1. Do not use soft water. Soft water may cause the coffee basket to flood.
2. Use regular electric perk grind coffee or coffee ground for all coffee makers for best results.
3. Do not use drip or finely ground coffee as it may cause the coffee basket to flood.
 - a. When grinding beans, grind to medium coarseness for best results.
 - b. Do not grind beans into a fine, powder-like texture, since this may cause the coffee basket to flood.
4. Remove coffee basket and grounds as soon as brewing is completed.
5. This also helps maintain coffee flavor.
6. The urn's lid can be used as a carrying tray when disposing of wet coffee grounds.
7. Before brewing a second time, allow urn to cool and rinse it out.

How to Use

1. Place on a flat, level surface.
2. Turn the lid counter-clockwise to open.
3. Pour in water. Make sure the water is above the "MIN" indicator and below the "MAX" indicator.
4. Place lid on top of urn and turn clockwise to lock into place.

5. Plug in the urn.
 - a. To brew coffee, place the percolator tube and filter basket in the tank and pour the desired amount of coffee grounds into the basket.
 - b. Make sure that the percolator tube is fitted properly inside the coffee urn before operating.
6. The percolator filter and basket are not required for boiling water.
7. Switch ON.
 - a. The "HEATING" light will turn on to indicate the boiling process has begun.
8. Tilt faucet lever to dispense.



Any damages made to the machine due to misuse, you the customer will be responsible to pay for the cost to replace the damaged machine.



TENTS | AUDIO VISUAL | DANCE FLOOR | STAGING | LINENS | DISHWARE

Boil Dry Protection & Manual Reset Button

Boil dry accidents are the result of boiling all the water out of an urn. These kinds of accidents

shorten component and product life in all water boiling appliances.

To prevent boil dry accidents, this appliance is equipped with a thermal limiter with a manual reset fun on (see below picture). If the water in the tank is completely boiled away, the appliance will turn itself off (though the pilot light will remain on).

To decrease the chance of boil dry accidents, operators are advised to turn the appliance off when not in use, especially overnight.


This appliance must be unplugged before it can be reset.

After unplugging, allow the appliance to cool down. Open the plastic bottom of the coffee urn and locate the reset switch in the control section. Press this button, place the plastic bottom back on the urn, plug in the appliance and switch the urn on.

If the pilot light is on, the unit has recovered to normal working condition. If the light is still off, unplug the appliance and repeat the process. Repeat this operation until the urn returns to normal working condition.

The manual reset is intended to protect the user and the coffee urn. In case of repeat incidents, the metal layering in the urn may damage due to boiling dry, which may also damage the thermal limiter and heating element beyond repair.

Coffee Urn Parts

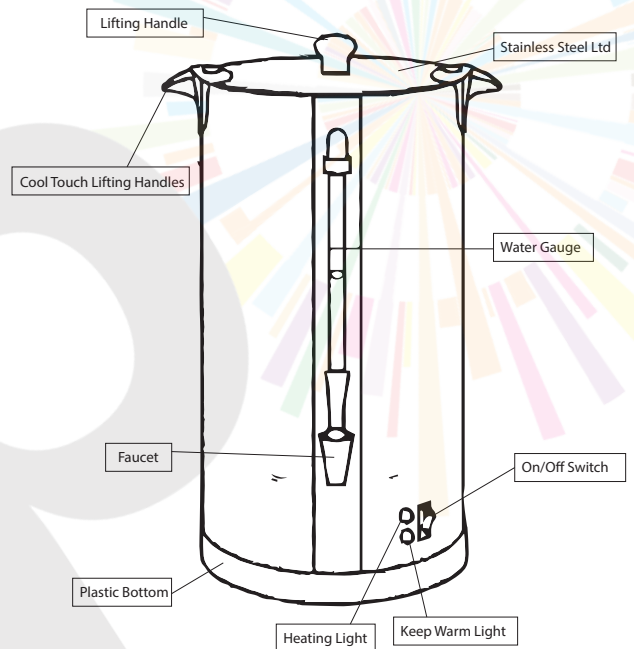

Coffee Measuring Guide

CUPS (5 OZ. SERVING)	GROUND COFFEE (8 OZ. DRY)
12-15	3/4 Cup
20-25	1 1/2 Cups
30-36	2 Cups
40-45	2 1/2 Cups
50-55	3 1/4 Cups
60-65	3 3/4 Cups
80-85	5 1/2 Cups
95-100	6 1/4 Cups

Any damages made to the machine due to misuse, you the customer will be responsible to pay for the cost to replace the damaged machine.