



TENTS | AUDIO VISUAL | DANCE FLOOR | STAGING | LINENS | DISHWARE

PATIO HEATER

Operating Instructions

Should not be operated by anyone under the age of 18.

WARNINGS:

1. DO NOT use in an explosive atmosphere. Keep heater away from areas where flammable liquids or vapors are stored or used.
2. TURN OFF liquid propane tank when the heater is not in use.
3. DO NOT alter unit in any manner or bypass safety valve.
4. DO NOT operate heater without the reflector.
5. ALWAYS place heater on a hard and level surface.
6. DO NOT use if wind velocity is greater than 10 mph because of flame-out possibility.
7. ALWAYS Wait 5 min. to relight a hot patio heater.

To Light:

1. Turn tank valve in a counter clockwise direction.
2. Turn control knob counter clockwise to the pilot position.
3. Depress and hold in control knob to begin pilot gas flow: Hold in control knob for 3 minutes to purge air from lines OR 5 seconds for regular relight.
4. While depressing knob, depress igniter button, which will snap indicating it has produced a spark, which should light the pilot. If not, depress control again and depress the auto pilot igniter until lit.



5. Once pilot is lit, continue to hold in control knob for 30 seconds or until pilot remains lit after knob is released.
6. Turn burner to "ON" position (all the way counter clockwise) and then reduce to desired heat range.

Relighting:

1. Turn control knob to off position.
2. Wait 5 minutes before attempting to relight pilot.
3. Repeat steps beginning with step 4 above.

Shut-Down Instructions:

1. Turn control knob clockwise to "OFF" position.
2. Turn tank valve clockwise to "OFF" when heater is not in use.

Any damages made to the heater due to misuse, you the customer will be responsible to pay for the cost to replace the damaged heater.