



TENTS | AUDIO VISUAL | DANCE FLOOR | STAGING | LINENS | DISHWARE

POPCORN MACHINE

Popping Instructions

Should not be operated by anyone under the age of 18.

1. Turn all switched on.
2. For first batch only, let kettle warm up for about 4 minutes.
3. Load pre-measured oil kit into kettle. If oil is solid, let oil warm in kettle for a minute or two.
4. Add pre-measured corn into kettle. Add colored salt to kettle. Close lid and allow to pop.
5. Popcorn will start to open kettle lid and fall into bottom of machine.
6. Listen for popping sound to stop
7. Dump kettle immediately after popping stops or kettle will burn.

If the pop corn burns, it means you waited too long to dump the kettle. Remember the popcorn is hot.



Any damages made to the machine due to misuse, you the customer will be responsible to pay for the cost to replace the damaged machine.

Also Available



SALE ITEM
Color Popcorn Kits



RENTAL ITEM
Classic Popcorn Cart



SALE ITEM
Regular Popcorn Kit