



TENTS | AUDIO VISUAL | DANCE FLOOR | STAGING | LINENS | DISHWARE

SNOW CONE MACHINE

Operating Instructions

Should not be operated by anyone under the age of 18.

WARNING

Moving knife blades inside. Insert ice **ONLY**.
Keep hands and finger out of ice hopper.
Do **NOT** let children operate.

To Start Operating:

1. Load hopper with small ice chunks or ice cubes.
2. Push and hold the motor switch as you pull down the pusher handle to force the ice against the spinning shaver head.
3. Open door and scoop snow into cups.
4. Top with you favorite syrup



Want a finer snow?

Lighten the amount of pressure you give when you pull down the pusher handle.

Do the opposite, by giving more pressure to achieve a coarser snow.



Any damages made to the machine due to misuse, you the customer will be responsible to pay for the cost to replace the damaged machine.



Don't forget!

SALE ITEM Snow Cone Kit